



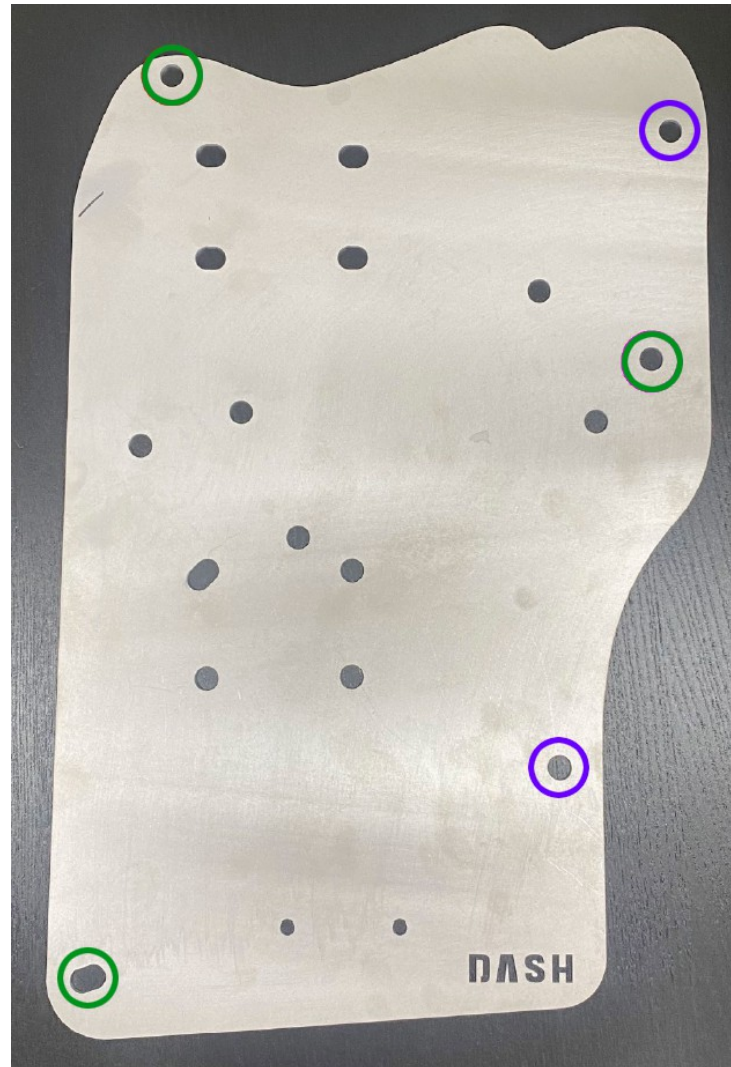

DASH Y62 REAR QUARTER COMPRESSOR BRACKET INSTALLATION INSTRUCTIONS

- Yellow:** ARB Compressor Holes
- Blue:** DASH TWIN Compressor Holes
- Orange:** Airbag Man Manifold Holes

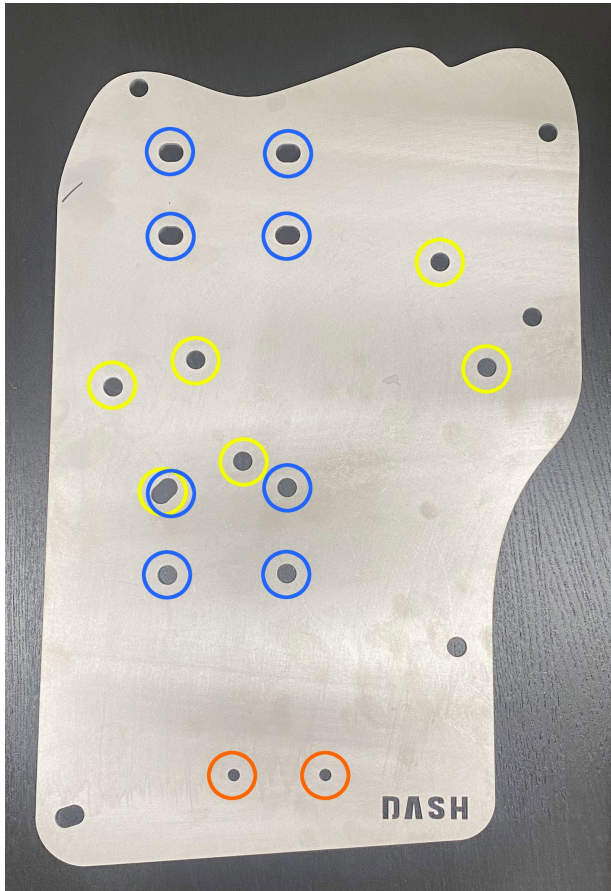

1. Align the plate with the purple holes and secure it using the M6 20mm bolts.

2. With a pen, mark the green holes to drill out in the vehicle. Remove the plate and drill the marked holes out. Insert the rivnuts into the drilled out holes.*

3. Attach the compressor to the plate using the M6 10mm button bolts and washers supplied.
You will need x6 bolts for an ARB compressor and x8 the DASH compressor.

4. Attach plate to your vehicle using the x5 circled holes with the x5 M6 20mm hex head bolt and washers.

5. For a correct fit you will need to replace the compressor filters with the DASH Compressor filters supplied in the kit.

* If you do not have a rivet gun these can be inserted manually, see this video for instructions:

<https://www.youtube.com/watch?v=16H6wr7fJYo>

