

DASH
OFFROAD


REAR
LADDER



INSTALLATION
INSTRUCTIONS

REAR LADDER

INSTALLATION INSTRUCTIONS

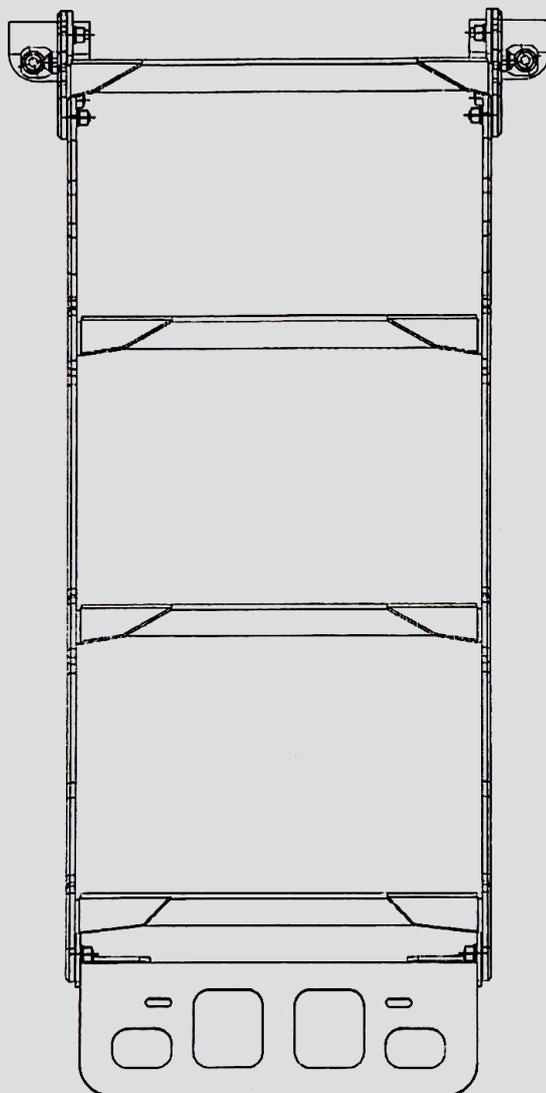


6 X M8X15MM BUTTON HEAD BOLT



2 X M8 NUTSERT



6 X M8X16MM WASHER

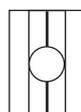

4 X M8 SLIDE NUT

REAR LADDER

INSTALLATION INSTRUCTIONS



1. Remove the number plate and keep the 2 bolts.
2. Insert the 4 x M8 Slide Nuts into the rack as shown below



3. Use the 4 x M8 Button head bolts and bolt the top of the ladder in place.




4. Adjust the bolt below to raise the rack so that it clears the spoiler and the base plate aligns with the existing number plate holes.




REAR LADDER INSTALLATION INSTRUCTIONS



5. Using the 2 Factory number plate bolts bolt the base plate in finger tight and mark the 2 holes below

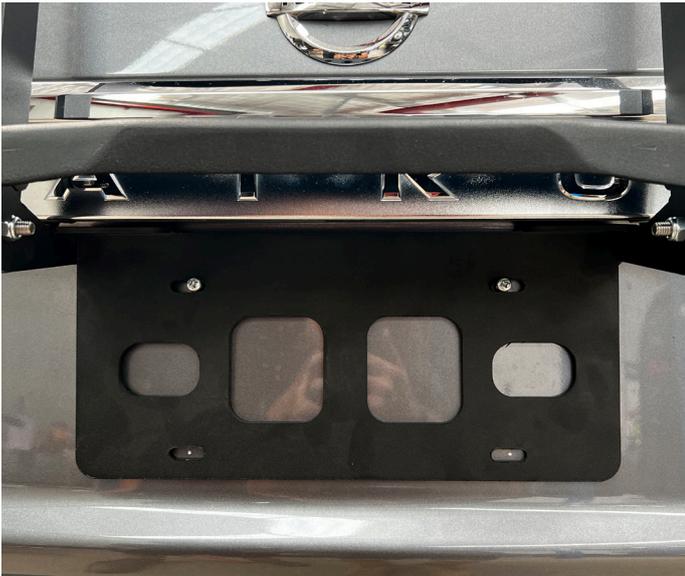

6. Remove the number plate bolts, lift the base plate out of the way and drill and insert the 2 M8 Nutserts (It is recommended to paint the holes before inserting the nutserts)

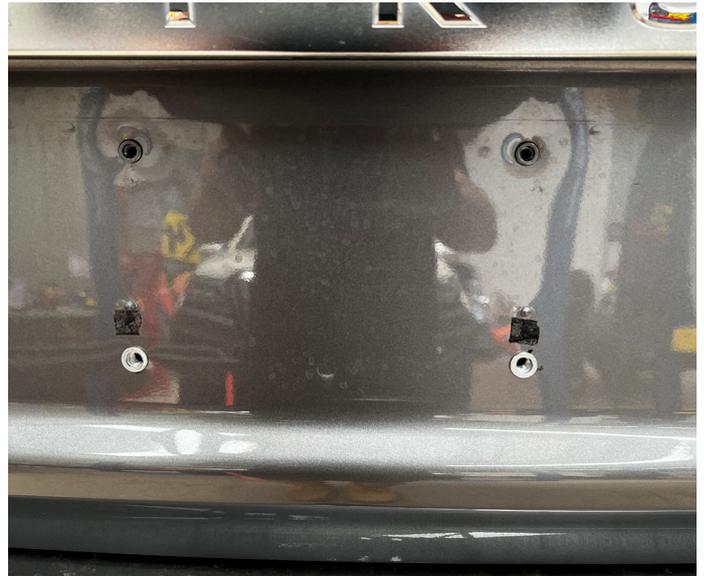

7. It is recommended to apply some sponge double sided tape or similar (Not supplied) to the tailgate before bolting up the base plate to avoid scratching the paint.

IF YOU DO NOT HAVE A RIVET GUN THESE CAN BE INSERTED MANUALLY - SEE 'DASH OFFROAD BASH PLATE INSTALL' ON YOUTUBE FOR MORE DETAILED INSTRUCTIONS ON THIS PROCESS

8. Attach the baseplate with the 2 x M8 bolts to the bottom 2 nutserts. Then bolt the numberplate back on using the 2 x factory bolts

