




DASH ³/₄ PREMADE ROOF RACK

INSTALLATION INSTRUCTIONS

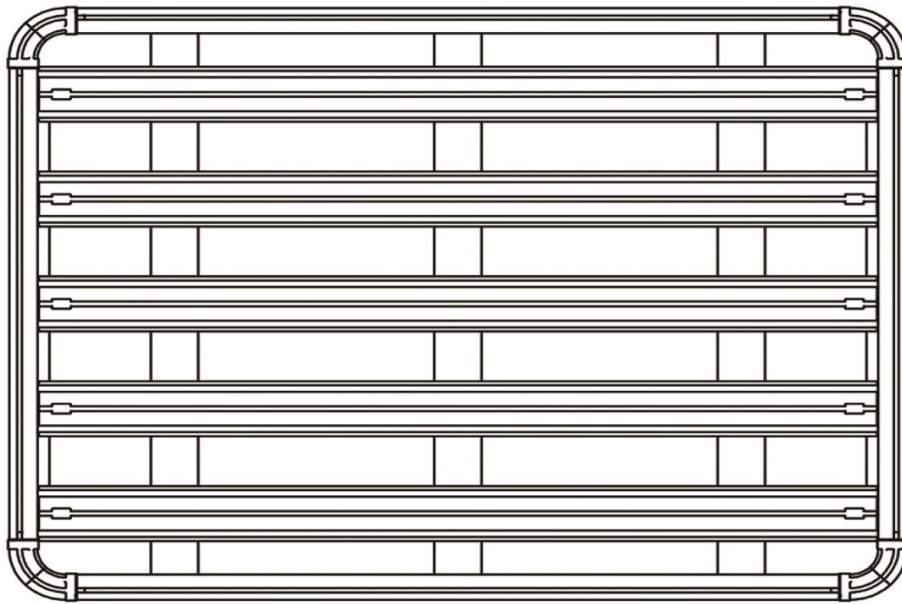

PLATFORM



X2 ROOF RAILS



WIND DEFLECTOR



X2 AWNING BRACKETS



X12 M10X20 T BOLT



X12 M10 NYLON SELF-LOCKING NUT



X12 10X2MM SPACER



X12 8X25X3MM RUBBER SPACER



X6 M8 12MM HEX HEAD BOLTS



X15 M8 SLIDING BLOCK



X12 M8 25MM BOLT



X12 M8 SPRING CUSHION



X12 8X16 SPACER



X10 M8 20MM SLIDING BLOCK


DASH ³/₄ ROOF RACK

INSTALLATION INSTRUCTIONS



Step 1

Before installing the roof rails you need to remove the plastic cover from the trim on your Patrol.

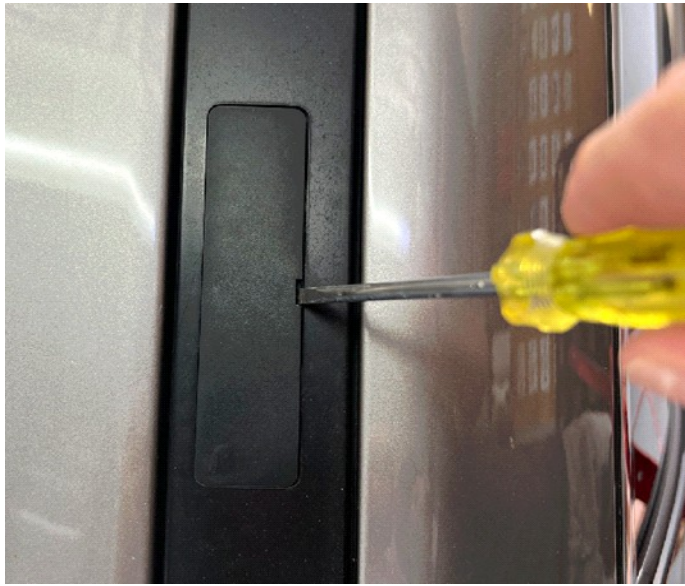

Step 2

Place the wind deflector in place ensuring it is facing backwards and align the 4 nut inserts with the holes in the wind deflector



Use the 5 M8 Hex Head 12mm Bolts



DASH ³/₄ ROOF RACK INSTALLATION INSTRUCTIONS



Step 3

From under the plastic cover remove the two white screw plugs.



Step 4

If required, clean the roof channel to remove any dust/dirt.



Step 5 - TIL Models only

TIL Models will need the cover over the centre mounting point trimmed. Place the rail in position to determine and mark how much to trim.



Step 6 - TIL Models only

Cut with a small reciprocating saw or small grinder. This will expose a white cover over the second mounting hole. Remove the second cover.



DASH ³/₄ ROOF RACK

INSTALLATION INSTRUCTIONS



Step 7

Place the 8x25mm rubber washers onto each of the bolt holes. We recommend you add silicone under each of these washers for additional sealing.



Step 8

Add some silicone to the bolt holes and silicone inside the white cap to seal it up.



Step 9

To bolt the roof rails down use the M8x25mm Stainless Steel Bolt with one 8x16mm washer. Apply some silicone to the thread of the bolt to ensure that the holes in the roof channel are waterproof when the bolt is in and tightened.



Step 10

Put the roof rails in place. Start with the bolts in the centre mount, then the front mount, and finally the back mount. Put all bolts in finger tight first before fully tightening.



DASH ³/₄ ROOF RACK

INSTALLATION INSTRUCTIONS



Step 11

Place slide nuts into platform rails



Step 12

Attach to roof rails using the M12 self locking Bolts.
This step will require a minimum 2 people.

