
SAFIERY CLASSIC LIGHT AND SWITCH WIRING INSTRUCTIONS





SAFIERY CLASSIC LIGHT AND SWITCH WIRING INSTRUCTIONS

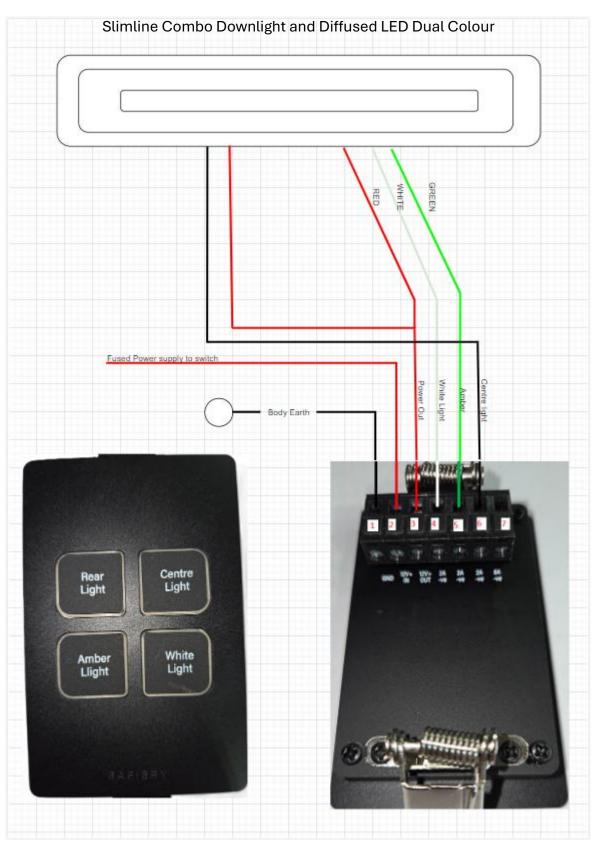

Classic Switch Wiring

The Classic Switch can switch/dim up to 4 devices as follows:

- 3 LED Lights up to 2 amps each circuit can be switched and dimmed
- 1 LED or 12-volt device (through relay) can be switched but not dimmed
- Total operating current must not exceed 10 amps

Note: The switch **Dims and Switches on the negative line to the LED. The positive is common.**

Classic Switch – Operation

Turning on/off:

Touch the button for less than 1 second. The switch LED changes from white to blue.

Dimming:

When on: Touch the button for more than 1 second, and the LED dims. Repeat and it reverses.

Turning off the back light:

When off: Touch any button for more than 1 second. The LED backlight turns off.